

## Part # 22-1335

# GENERAL OPERATING INSTRUCTIONS: Deluxe Ford Spring Lock Honing Kit

**I KNOW,  
I KNOW ... But This is Important  
Stuff for Both of Us!**



### DISCLAIMER

We believe the information contained herein to be reliable. However, general technical information is given by us without charge and the user shall employ such information at his own discretion and risk. We assume no responsibility for results or damages incurred from the use of such information in whole or in part. **Always refer to specific instructions and technical information supplied by vehicle manufacturer.**



All warranties expressed or implied, including warranties on merchantability and fitness of purpose, are null and void if the equipment is altered, damaged or misused in any way, or if equipment is not repaired by authorized repair station using authorized parts.

### HOW TO USE

#### **22-1306 - Ford Universal A/C & Fuel Line Spring Lock Coupling Tool**

Disconnect Spring Lock Coupling by selecting the proper size tool. Slide tool into Coupling and apply pressure on each side to expand garter spring to pull apart.


**HINT:** If Necessary, a Penetrating Oil May be Used to Free Garter Spring

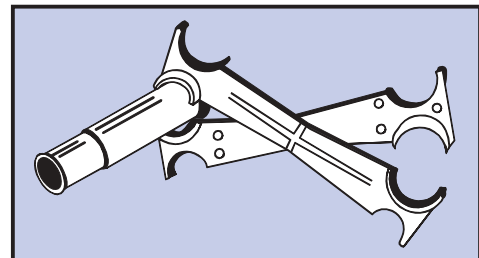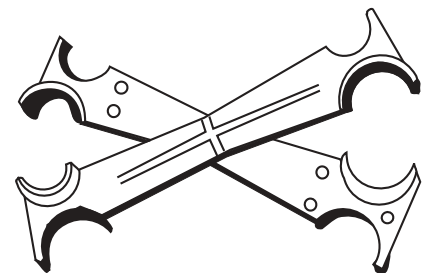

### 99-412 - "O" Ring and Seal Sleeve Remover

Use specially designed "O" Ring tool to remove "O" Rings. Check for missing or damaged garter spring. If necessary, Use "O" Ring Tool to remove damaged spring.


**HINT:** Always Inspect Coupler & Clean with a Mild Solvent. Replace Garter Spring (if Necessary). Lightly Oil "O" Rings (Use 22-1369 Oil or Equivalent) and Install.

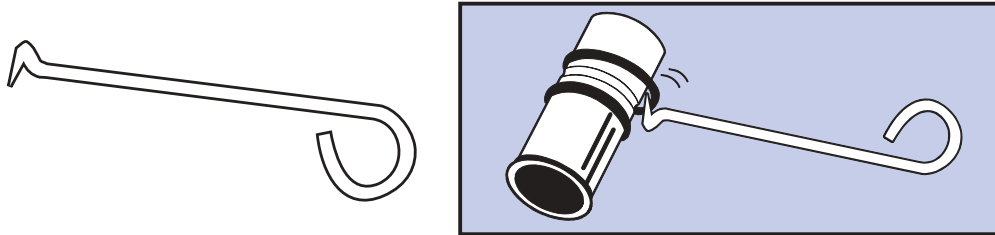

### 22-1340 - Ford Spring Lock Honing Tools (1/2", 5/8", 3/4", 7/8")

Select the proper honing tool. If power or air is to be used, always run Honer before entering the tube, Working slow, short strokes.


**HINT:** Just A Few Seconds Are Necessary to Clean Any Debris out of Tube. Inspect & Repeat if Necessary.

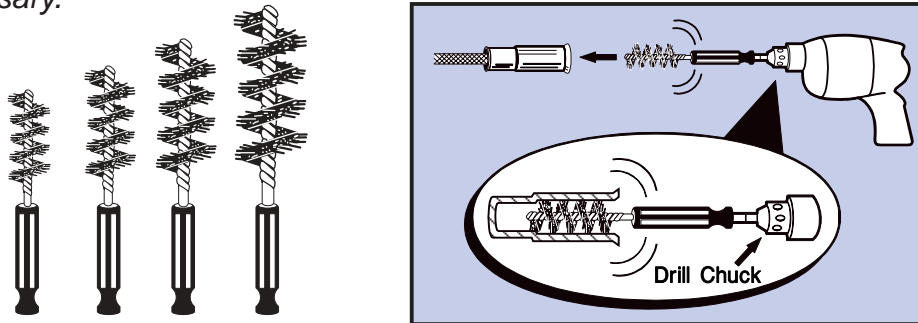

### 22-1337 - Honing Handle

When using manually, turn clockwise slowly with slight pressure forward to enter tube. To exit tube, turn clockwise with slight pressure backwards.

**HINT:** Honing Handle is Used for Turning Purposes Only. It is **NEVER** Fastened to Honing Brushes.

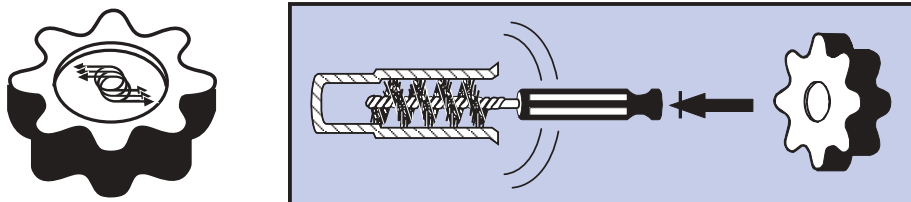

For Technical Questions & Replacement Parts call 845-562-1442. In the unlikely event that you need factory repair, part or item must be securely packed and shipped prepaid to:

**Classic Tool Design, Inc.**  
**Repair Department**  
**31 Walnut Street, New Windsor, NY 12553**

