

## Part # 22-1488

# GENERAL OPERATING INSTRUCTIONS: *UNIVERSAL COBRA™ COUPLINGS WITH RUBBER DRAW COLLARS*

**I KNOW,  
I KNOW ...** *But Read Carefully Before  
Using Equipment Anyway.*




### DISCLAIMER

We believe the information contained herein to be reliable. However, general technical information is given by us without charge and the user shall employ such information at his own discretion and risk. We assume no responsibility for results or damages incurred from the use of such information in whole or in part. **Always refer to specific instructions and technical information supplied by vehicle manufacturer.**

All warranties expressed or implied, including warranties on merchantability and fitness of purpose, are null and void if the equipment is altered, damaged or misused in any way, or if equipment is not repaired by authorized repair station using authorized parts.

### HOW IT WORKS

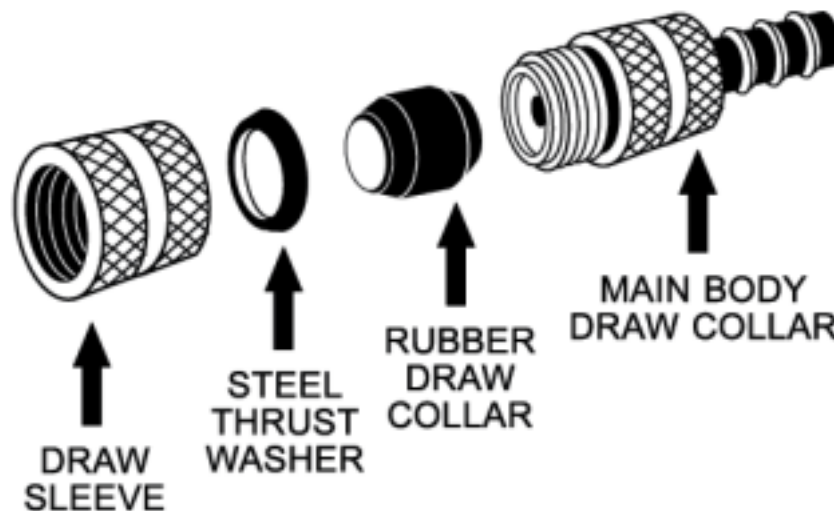

1. Place the proper size Cobra™ Rubber Draw Collar in main body neck.


**NOTE: To Select the Proper Size Draw Collar, the Collar Should Size Snugly Over the Pipe or Fitting to be Sealed.**

2. Place the Draw Sleeve with Thrust Washer over Rubber Draw Collar and start threads (one or two turns).
3. Place the assembled unit over pipe or fitting and hand tighten until snug. **(Caution - Do Not Use Wrench or Pliers).**
4. ***IT'S THAT SIMPLE!***

---

---

### **ADAPTOR FITTING - HOW IT WORKS**

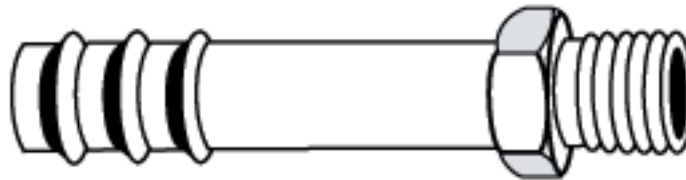

***In Some Cases, Access is Not Possible, or Fitting on Unit Will Not Go Back Far Enough to Allow Coupling to Go On. The Adaptor Fitting Will Make Access Possible.***

1. Position adaptor fitting on unit to be flushed.
2. Place Universal Cobra™ Draw Collar with proper size Cobra™ Rubber Draw Collar - (See Notes 1 & 2 above).

### **HINTS**

1. A light film of oil on rubber makes compression easier.
2. Make sure that Cobra™ Universal Coupling is on as far as possible.
3. Do not be concerned about a small drip
4. Never over tighten.
5. Always remove orifice tube.
6. You may need special fittings for certain vehicles.

*For Technical Questions & Replacement Parts call 845-562-1442. In the unlikely event that you need factory repair, part or item must be securely packed and shipped prepaid to:*

***Classic Tool Design, Inc.  
Repair Department  
31 Walnut Street, New Windsor, NY 12553***

